

ELED Fresnel 150 (V2) DMX Settings

1 Channel DMX Mode

Channel	Value	Function
1	0 – 255	Dimming 0%-100%

3 Channel DMX Mode – 1

Channel	Value	Function
1	0 – 255	Dimming 0%-100%
2	0 – 255	Strobing Slow – Fast
3	0 – 20 21 – 40 41 – 60 61 – 80 81 – 100 101 – 255	Dimmer Curve Settings DC-0 Setting DC-1 Setting DC-2 Setting DC-3 Setting DC-4 Setting Dimmer Curve Setting is active

3 Channel DMX Mode – 2

Channel	Value	Fuction
1	0 – 255	Dimming 0%-30%
2	0 – 255	Dimming 30%-100%
3	0 – 20 21 – 40 41 – 60 61 – 80 81 – 100 101 – 255	Dimmer Curve Settings DC-0 Setting DC-1 Setting DC-2 Setting DC-3 Setting DC-4 Setting Dimmer Curve Setting is active