


# **ELATION®**

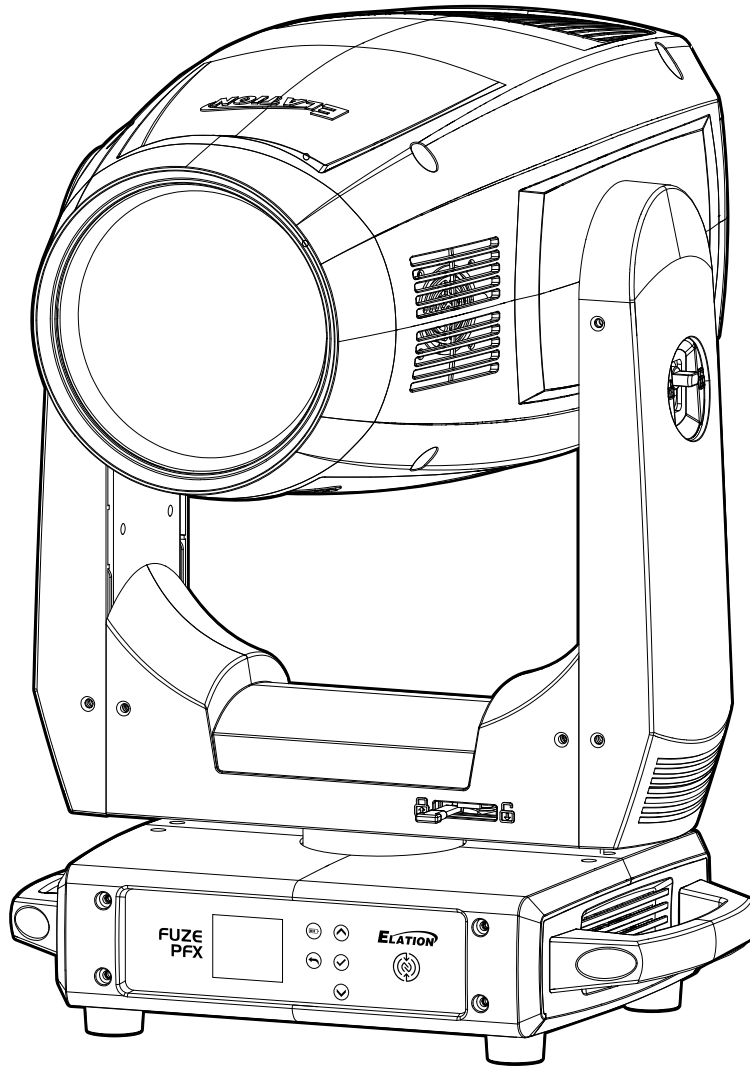

## **FUZE PFX** user manual

©2025 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA** | 6122 S. Eastern Ave. | Los Angeles, CA. 90040  
 323-582-3322 | 323-832-9142 fax | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V.** | Junostraat 2 | 6468 EW Kerkrade, The Netherlands  
 +31 45 546 85 66 | +31 45 546 85 96 fax | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)

**Elation Professional Mexico** | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000  
 +52 (728) 282-7070

**DOCUMENT VERSION**



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before installation and/or programming.

Date	Document Version	Software Version ≥	DMX Channel Modes	Notes
02/11/25	1.0	1.1.2	38/55 Channels	Initial release.

# CONTENTS

<b>General Information</b>	<b>4</b>
<b>Warranty Returns (USA Only)</b>	<b>5</b>
<b>Safety Guidelines</b>	<b>6</b>
<b>Overview</b>	<b>8</b>
<b>Colors and Gobos</b>	<b>9</b>
<b>Custom Gobos</b>	<b>10</b>
<b>Gobo Installation</b>	<b>11</b>
<b>Installation Guidelines</b>	<b>13</b>
<b>System Menu</b>	<b>17</b>
<b>Dimmer Mode</b>	<b>19</b>
<b>DMX Traits</b>	<b>20</b>
<b>Refresh Rate</b>	<b>26</b>
<b>Remote Device Management (RDM)</b>	<b>27</b>
<b>Maintenance Guidelines</b>	<b>28</b>
<b>Error Codes</b>	<b>29</b>
<b>Specifications</b>	<b>30</b>
<b>Dimensional Drawings</b>	<b>31</b>
<b>Optional Accessories   FCC Statement</b>	<b>32</b>

# GENERAL INFORMATION

**This product is intended for professionally use only, not suitable for private use.**

## INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information.

## UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

## BOX CONTENTS

Omega Brackets (x2)  
IP65 Locking Power Cable (X1)  
Safety Cable

## CUSTOMER SUPPORT

Contact **ELATION Service** for any product related service and support needs. Also visit [forums.elationlighting.com](https://forums.elationlighting.com) with questions, comments or suggestions.

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**

**323-582-3322** | [support@elationlighting.com](mailto:support@elationlighting.com)

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**

**+31 45 546 85 63** | [support@elationlighting.eu](mailto:support@elationlighting.eu)

**REPLACEMENT PARTS** please visit [parts.elationlighting.com](https://parts.elationlighting.com)



## IMPORTANT NOTICE!

**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT.**

**DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**

# LIMITED WARRANTY (USA ONLY)

- A. Elation Professional hereby warrants, to the original purchaser, Elation Professional products to be free of general manufacturing defects in material and workmanship for a period of three years (1,095 days), Elation Professional LED arrays to be free of manufacturing defects in material and workmanship for five years (1,825 days), and Elation Professional product rechargeable batteries to be free of manufacturing defects in material and workmanship for a period of six months (180 days), from the original date of purchase. This warranty excludes discharge lamps and all product accessories. This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, send the product only to the Elation Professional factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, Elation Professional will pay return shipping charges only to a designated point within the United States. If any product is sent, it must be shipped in its original package and packaging material. No accessories should be shipped with the product. If any accessories are shipped with the product, Elation Professional shall have no liability what so ever for loss and/or damage to any such accessories, nor for the safe return thereof.
- C. This warranty is void if the product serial number and/or labels are altered or removed; if the product is modified in any manner which Elation Professional concludes, after inspection, affects the reliability of the product; if the product has been repaired or serviced by anyone other than the Elation Professional factory unless prior written authorization was issued to purchaser by Elation Professional; if the product is damaged because not properly maintained as set forth in the product instructions, guidelines and/or user manual.
- D. This is not a service contract, and this warranty does not include any maintenance, cleaning or periodic check-up. During the periods as specified above, Elation Professional will replace defective parts at its expense, and will absorb all expenses for warranty service and repair labor by reason of defects in material or workmanship. The sole responsibility of Elation Professional under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of Elation Professional. All products covered by this warranty were manufactured after January 1, 1990, and bare identifying marks to that effect.
- E. Elation Professional reserves the right to make changes in design and/or performance improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with the products described above. Except to the extent prohibited by applicable law, all implied warranties made by Elation Professional in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty periods set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said periods have expired. The consumer's and/or dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall Elation Professional be liable for any loss and/or damage, direct and/or consequential, arising out of the use of, and/or the inability to use, this product.
- G. This warranty is the only written warranty applicable to Elation Professional products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

## WARRANTY RETURNS

All returned service items whether under warranty or not, must be freight pre-paid and accompany a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper and included in the shipping container. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. Items returned without a R.A. number clearly marked on the outside of the package will be refused and returned at customer's expense. You may obtain a R.A. number by contacting customer support.

# SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee a smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging and mounting hardware included with this fixture or available optional accessories should be used for installation. Any modifications to the fixture and/or the included and optional rigging and mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.

**The light source in this luminaire must only be replaced by the manufacturer, their service agent, or a similarly qualified individual.**

**Do not stare at the operating light source.**

**Position the luminaire so that prolonged staring into it at distances closer than 3.9 meters is not expected.**

**Maintain a minimum distance of 1 foot (0.3 meters) from lighted objects.**

**Replace shields, lenses, or ultraviolet screens if they show visible damage, such as cracks or deep scratches, that compromise their effectiveness.**

**Reinforced insulation should be maintained between the main power supply and control contactors.**

**This luminaire is designed for professional use only.**




**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF; DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG FIXTURE INTO A DIMMER PACK!  
NEVER OPEN THIS FIXTURE WHILE IN USE!  
UNPLUG POWER BEFORE SERVICING FIXTURE!  
NEVER TOUCH FIXTURE DURING OPERATION, AS IT MAY BE HOT!  
KEEP FLAMMABLE MATERIALS AWAY FROM FIXTURE!**

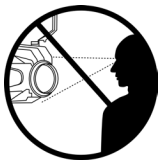

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!**



**INDOOR / DRY LOCATIONS USE ONLY!  
DO NOT EXPOSE FIXTURE TO RAIN AND/OR MOISTURE!**



**MINIMUM DISTANCE TO OBJECTS/SURFACES IS 1.0 FOOT (0.3 METER)  
MINIMUM DISTANCE OF FLAMMABLE MATERIALS FROM THE SURFACE IS 1.6 FEET (0.5 METER)  
MAXIMUM AMBIENT OPERATING TEMPERATURE IS 113°F (45°C)**

# SAFETY GUIDELINES

**DO NOT TOUCH** the fixture housing during operation.

**DO NOT** shake fixture and avoid brute force when installing and/or operating fixture.

**DO NOT** operate fixture if the power cord is frayed, crimped, damaged and/or if any of the power cord connectors are damaged or do not fit into the fixture securely with ease.

**NEVER** force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace it immediately with a new one of similar power rating.

**DO NOT** block any air ventilation slots. All fan and air inlets must remain clean and never blocked.

Allow approx. 6" (15cm) between fixture and other devices or a wall for proper cooling.

**TURN OFF** the power and allow approximately 15 minutes for the fixture to cool down before serving.

**ALWAYS** disconnect fixture from power before performing any service and/or cleaning procedure.


**ONLY** handle power cord by the plug end, never pull plug out by tugging the wire portion of the cord.

During the initial operation of this fixture, a light smoke or smell may emit from the interior of the fixture. This is a normal process and is caused by excess paint in the interior of the casing burning off from the heat associated with the LED and will decrease gradually over time.

Consistent operational breaks will ensure fixture will function properly for many years.

**ONLY** use the original packaging and materials to transport the fixture for service.


# OVERVIEW

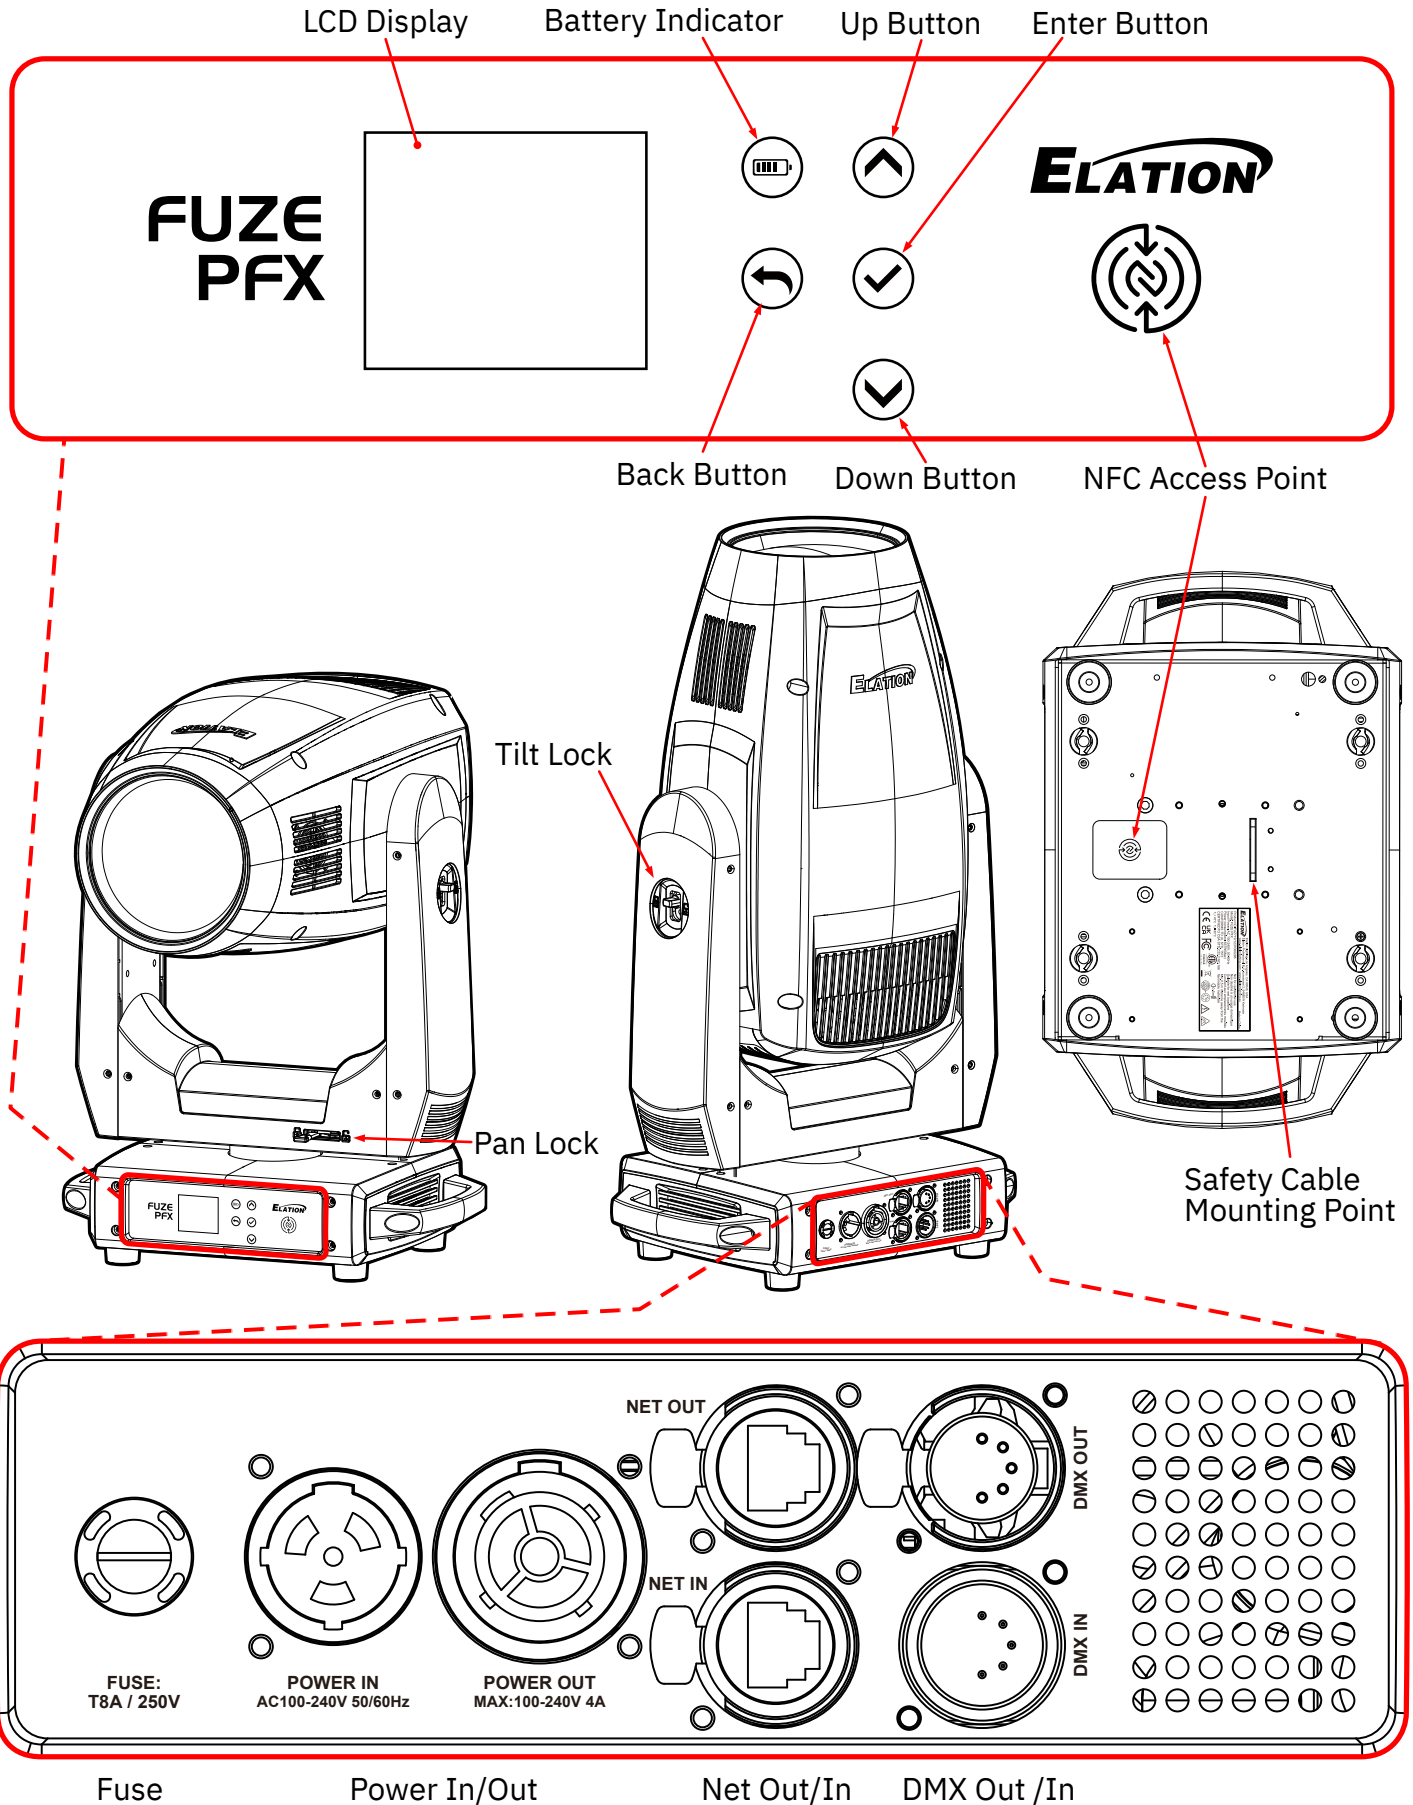



# COLORS AND GOBOS

## ROTATING GOBO WHEEL

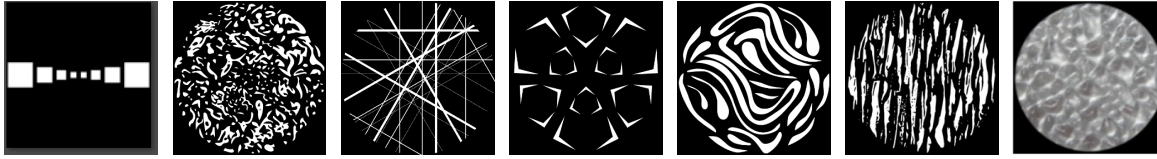

POS 1

POS 2

POS 3

POS 4

POS 5

POS 6

POS 7

## FIXED GOBO WHEEL



POS 1

POS 2

POS 3

POS 4

POS 5

POS 6

POS 7


POS 8

POS 9

POS 10

POS 11

## COLOR WHEEL

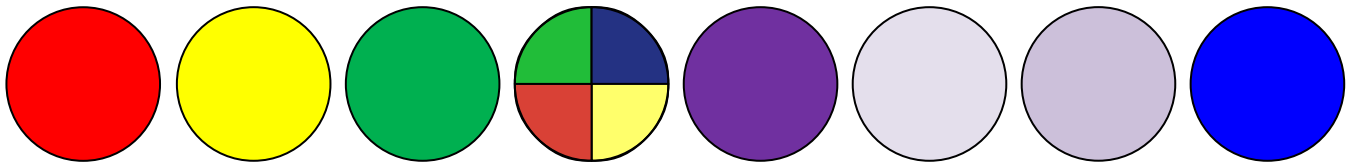

POS 1  
RED

POS 2  
YELLOW

POS 3  
GREEN

POS 4  
QUAD  
COLOR

POS 5  
UV

POS 6  
HIGH  
CRI 80

POS 7  
HIGH CRI  
90

POS 8  
BLUE

## PRISM




POS 1  
6 FACET  
ROUND

POS 2  
6 FACET  
LINEAR

# CUSTOM GOBOS: ROTATING GOBO WHEEL 1

FUZE PFX ROTATING GLASS GOBOS - WHEEL 1 ONLY	
Gobo O.D. (Max. Outer Diameter)	ø16.5mm
Gobo I.D. (Max. Image Diameter)	ø12.5mm
Gobo Holder Diameter	ø16.6mm
Gobo Material	Borofloat Glass

## ROTATING GOBO WHEEL GOBO & HOLDER

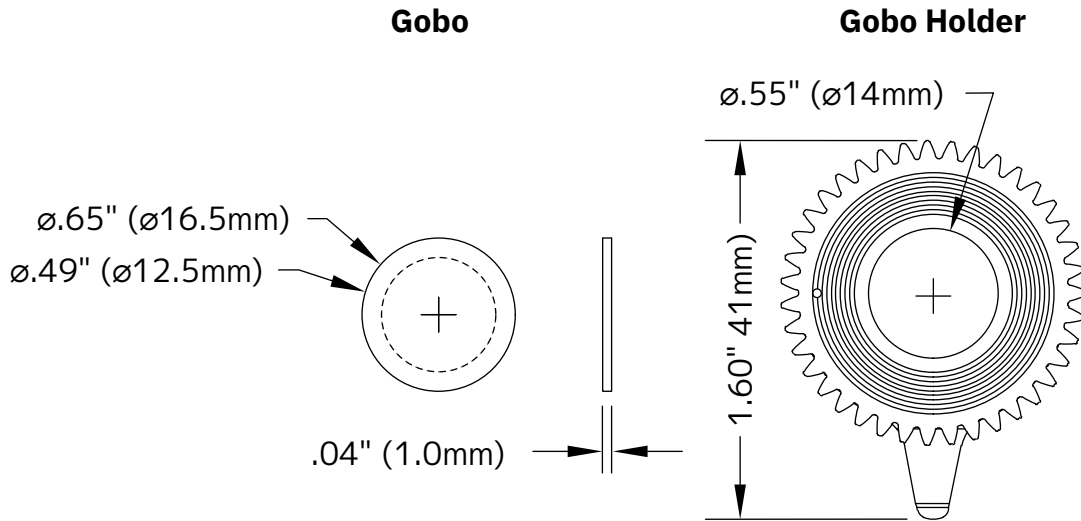

### \*\*\* IMPORTANT NOTICE REGARDING CUSTOM GOBOS \*\*\*

Due to the high temperature optical system, special material as listed above is required for custom gobos. Due to varying manufacturing processes and tolerances, it is highly recommended to provide a gobo sample and holder from the fixture to the custom gobo vendor for accurate sizing. Extended testing of custom gobo designs is highly recommended prior to use. Contact ELATION SERVICE for further information.


ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST

323-582-3322 | [support@elationlighting.com](mailto:support@elationlighting.com)

ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET

+31 45 546 85 63 | [support@elationlighting.eu](mailto:support@elationlighting.eu)



# GOBO INSTALLATION

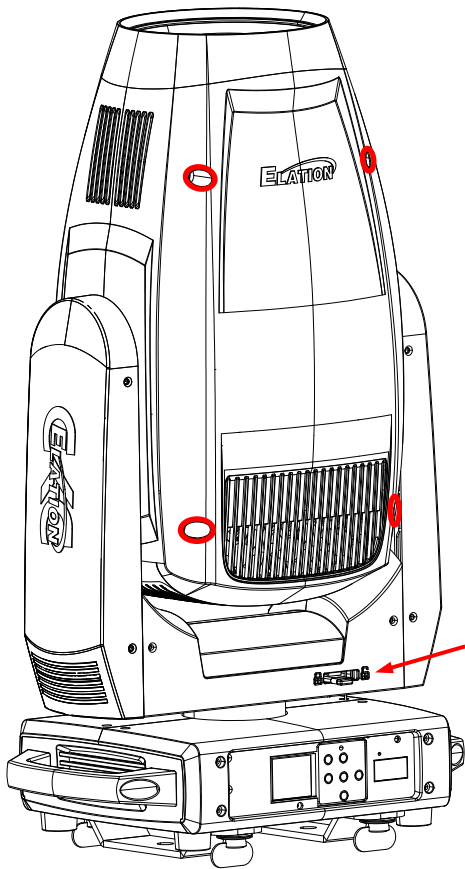

Place the fixture on a firm flat surface. Locate the (4x) screws securing the panel on the **Pan Lock** side of the moving head and remove them.


Pan Lock

Locate the Fan Ducting, remove the 2x screws that secure it to the internal housing frame..

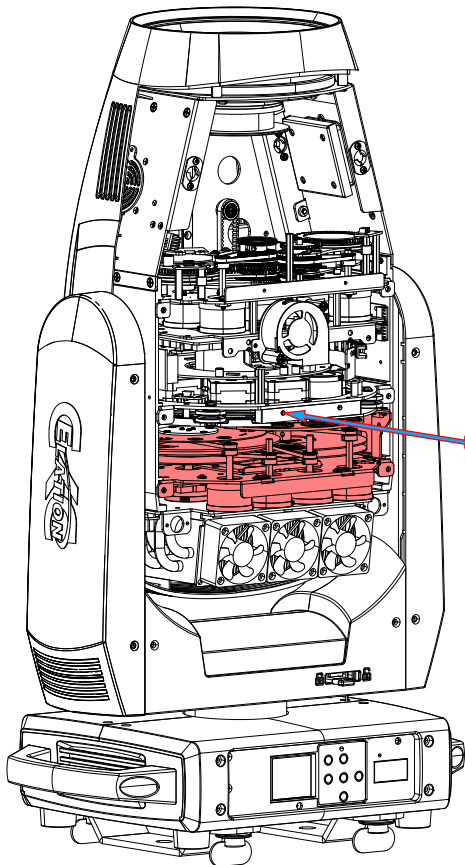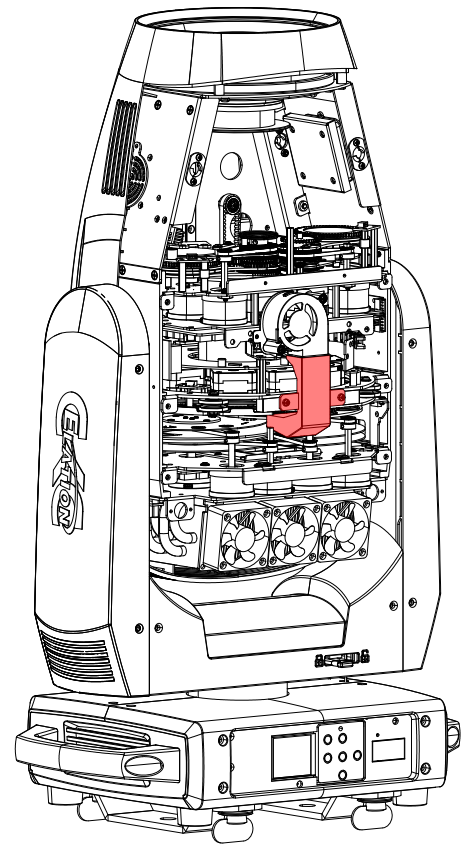


Locate the Gobo Module, remove the screws that secure it to the internal housing frame, and unplug/disconnect wire harness.

# GOBO INSTALLATION

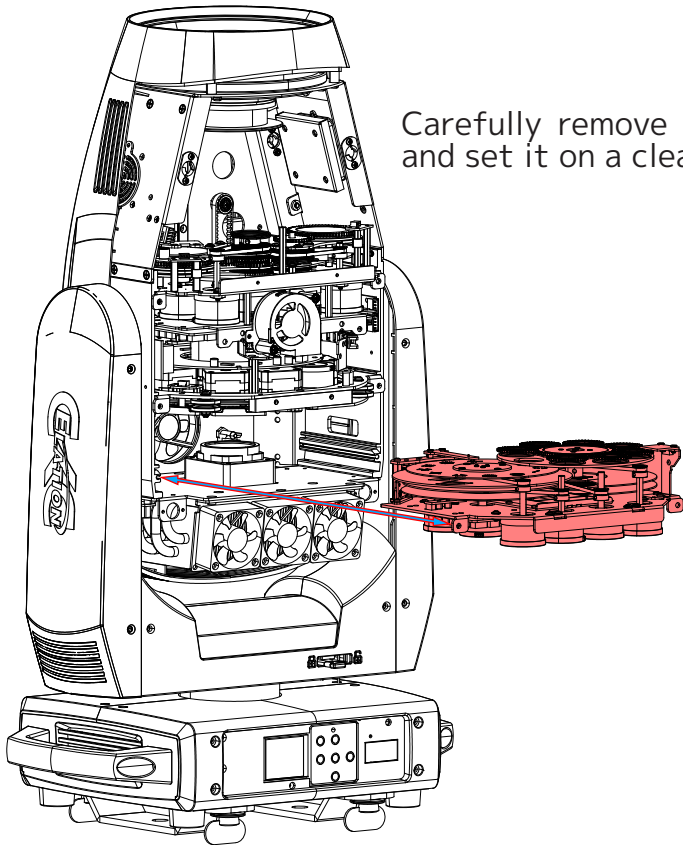



Carefully remove the Gobo Module and set it on a clean surface.

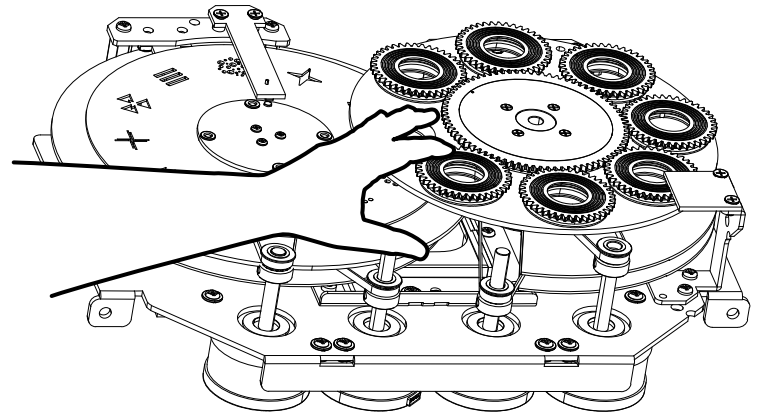

Locate the specific Rotating Gobo to replace. Carefully grip the Gobo using your thumb and index finger, gently lift it slightly, and then pull it out and away until it fully clears the Gobo Wheel.

## CAUTION: TAKE CARE NOT TO SCRATCH GOBO OR GOBO HOLDER

Locate the tab of the Retention Spring, and with a precision pick (or similar tool), carefully press the Retaining Spring inward to relieve the tension. Remove the retaining spring and carefully separate the GOBO from the GOBO Holder.

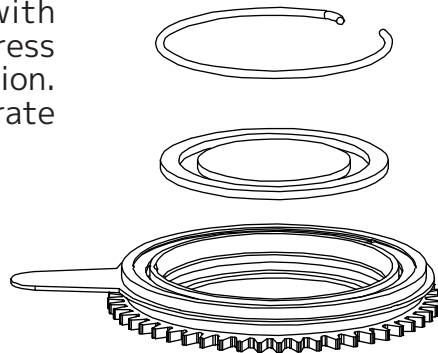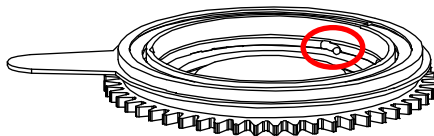

**Note:** To ensure proper Gobo orientation on the Rotating Gobo Wheel, align the Alignment Indices before installing the Retention Spring.

# INSTALLATION GUIDELINES



## FLAMMABLE MATERIAL WARNING

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



## ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.



USE CAUTION WHEN POWER LINKING OTHER MODEL FIXTURES AS THE POWER CONSUMPTION OF OTHER MODEL FIXTURES MAY EXCEED THE MAX POWER OUTPUT ON THIS FIXTURE. MAX 8A POWER LINK.



MINIMUM DISTANCE TO OBJECTS/SURFACES  
MUST BE 1 FOOT (0.3 METERS)



MINIMUM DISTANCE OF INFLAMMABLE MATERIALS  
FROM THE SURFACE IS 1.6 FEET (0.5 METER)



MAXIMUM AMBIENT TEMPERATURE 113° F (45°C)



**DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!**

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Overhead rigging requires extensive experience, including amongst others calculating working load limits, understanding of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Fixture(s) should be installed in areas outside walking paths, seating areas, or away from areas where unauthorized personnel might reach the fixture by hand.

**NEVER** stand directly below the fixture(s) when rigging, removing or servicing.


Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.

Allow approximately 15 minutes for the fixture to cool down before servicing.

# INSTALLATION GUIDELINES

## OMEGA BRACKETS INSTALLATION

Insert the Omega Brackets into the matching holes on the bottom of the fixture. Secure the Omega Brackets to the fixture by turning each quick-lock fastener  $\frac{1}{4}$  turn clockwise; making sure the fastener is completely locked. Omega Brackets can be installed into the fixture base as illustrated below.

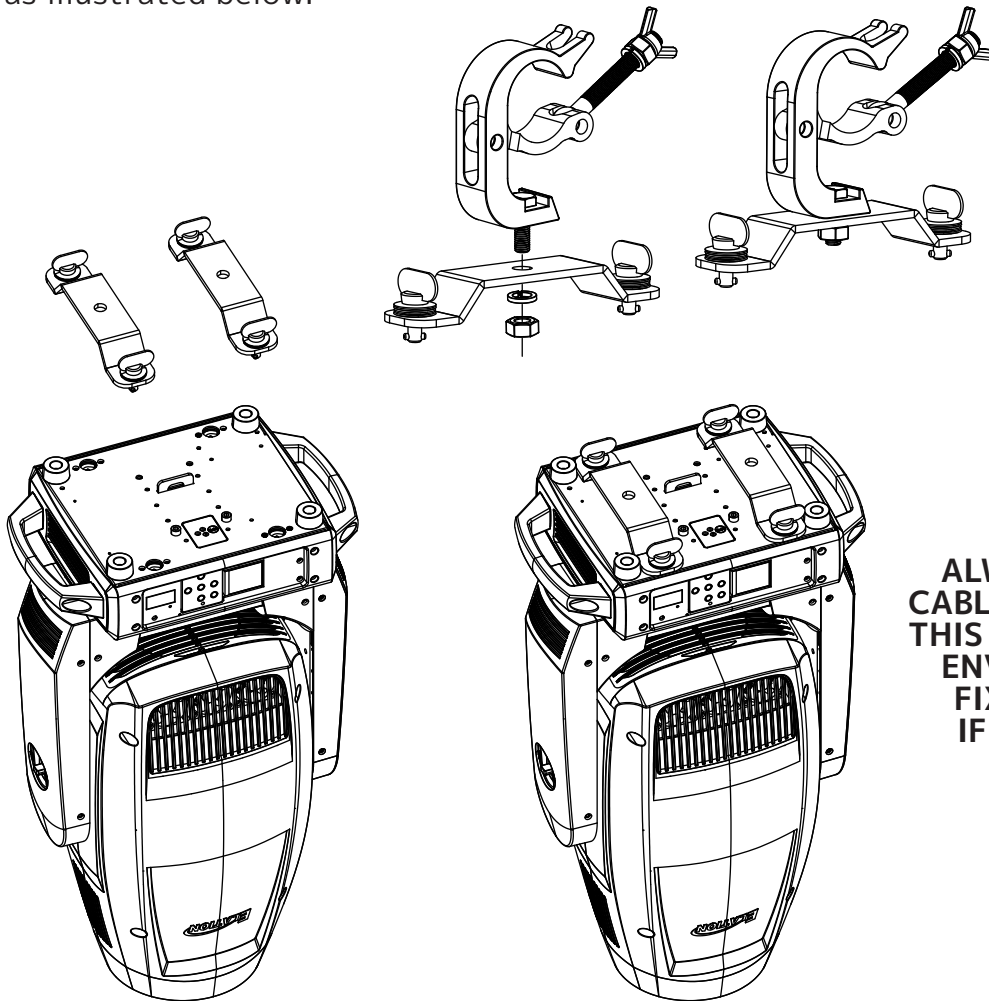

**SAFETY CABLE**  
ALWAYS ATTACH A SAFETY  
CABLE WHENEVER INSTALLING  
THIS FIXTURE IN A SUSPENDED  
ENVIRONMENT TO ENSURE  
FIXTURE WILL NOT DROP  
IF MOUNTING / RIGGING  
HARDWARE FAILS

## CLAMP INSTALLATION (NOT INCLUDED)

When mounting fixture to truss, be sure to secure an appropriately rated professional grade rigging clamp to the included **Omega Brackets** using an M10 screw fitted through the center hole of the **Omega Brackets**. The fixture provides a built-in rigging point for a **SAFETY CABLE**. Be sure to only use one of the designated rigging points for the safety cable and never secure a safety cable to the Pendant or Yoke Brackets.


## RIGGING

Overhead rigging requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury. Fixture is fully operational in the specific mounting positions illustrated below.

# INSTALLATION GUIDELINES

## RIGGING

The Fuze PFX is fully operational in (3) different mounting positions, hanging upside-down, mounted sideways on trussing, or set on a flat level surface. Overhead rigging requires extensive experience, including among others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

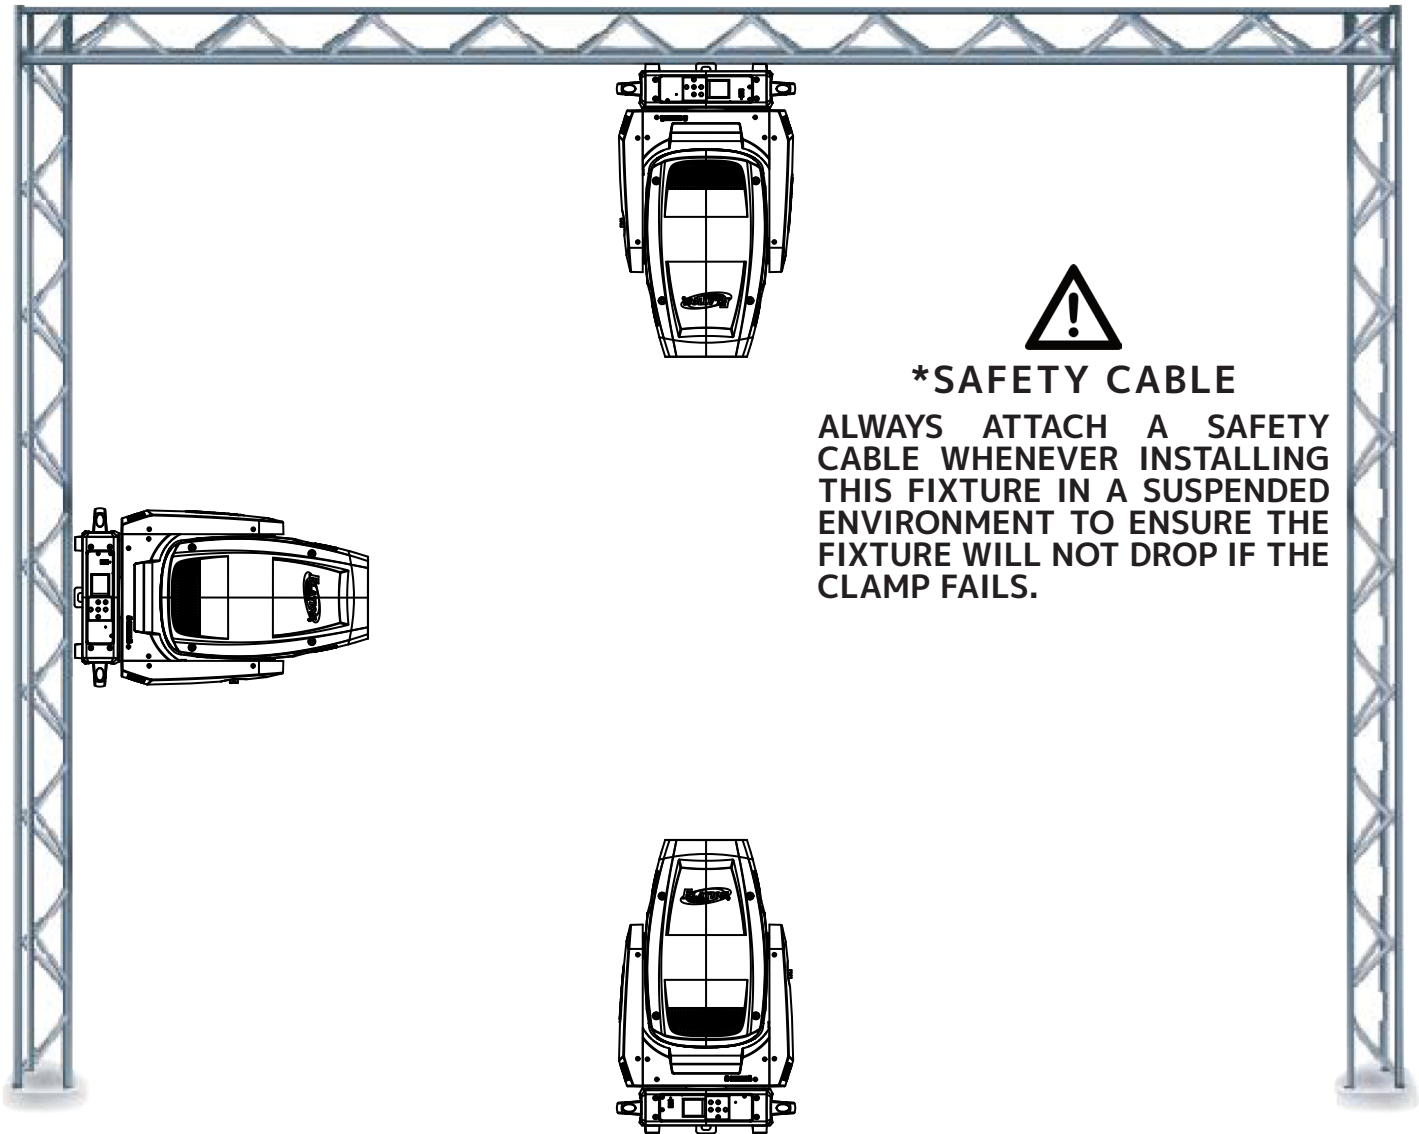

**CAUTION:** Falling fixtures can cause severe injury or serious equipment damage! For this reason, fixtures should be installed and inspected only by qualified personnel. Do not install the unit if you lack the qualifications to do so, or if you have doubts about the safety and security of the installation setup or location!



Always attach an appropriate **SAFETY CABLE** whenever installing this fixture in a suspended environment to ensure fixture will not fall if mounting / rigging hardware fails.


# INSTALLATION GUIDELINES

## POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific to ELATION lighting fixtures; it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

**DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.**

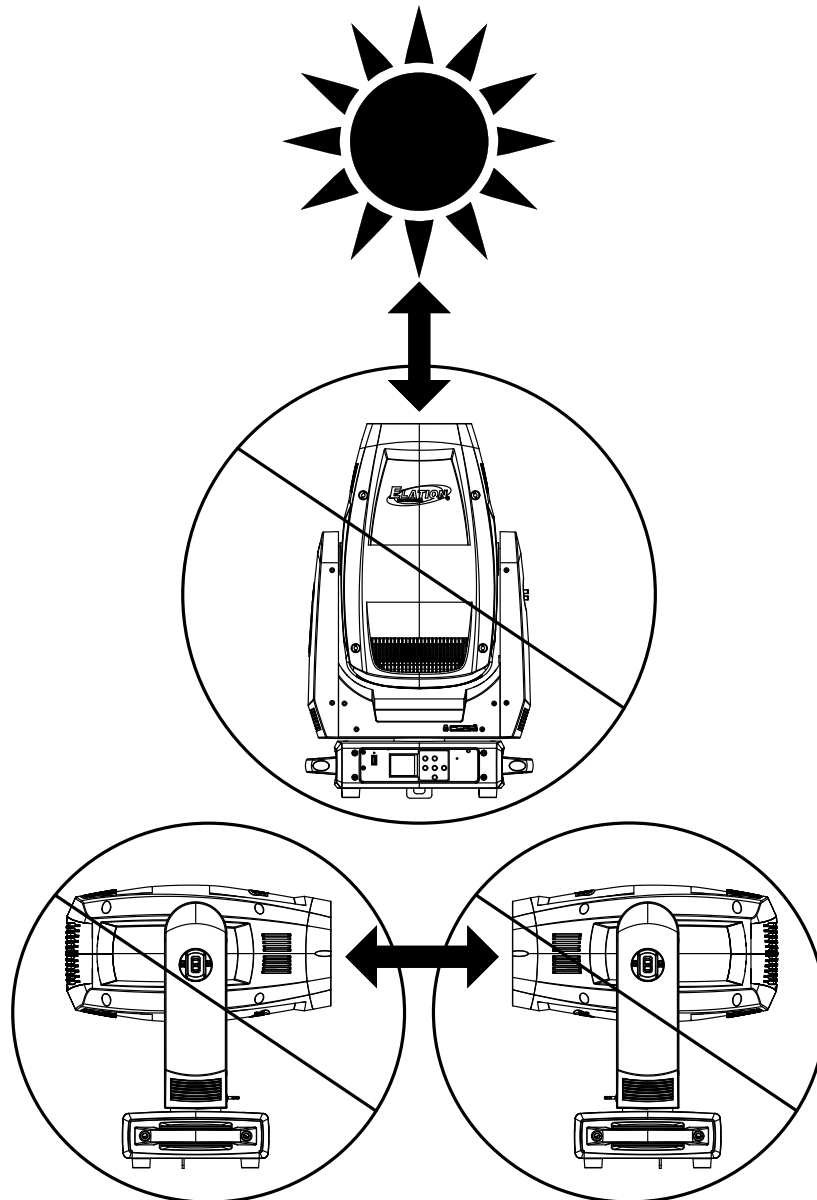




# SYSTEM MENU

The fixture includes an easy to navigate system menu. The LCD touch panel display located on the front of the fixture (see image below), provides access to the main system menu and is where all necessary system adjustments are made to the fixture. During normal operation, pressing the **ENTER (Check Mark)** button once will access the fixture's main menu. Once in the main menu you can navigate through the different functions and access the sub-menus with the **UP** and **DOWN** buttons. Once you reach a field that requires adjusting, press the **ENTER** button to activate that field and use the **UP** and **DOWN** buttons to adjust the field. Pressing the **ENTER** button once more will confirm your setting. You may exit the main menu at any time without making any adjustments by pressing the **ESC (Back)** button.

To access the LCD Menu Control Display via the internal battery, press and hold the **BATTERY ICON** button for 3 seconds. The LCD Menu Control Display will shut **OFF** automatically about 1 minute from the last button press.

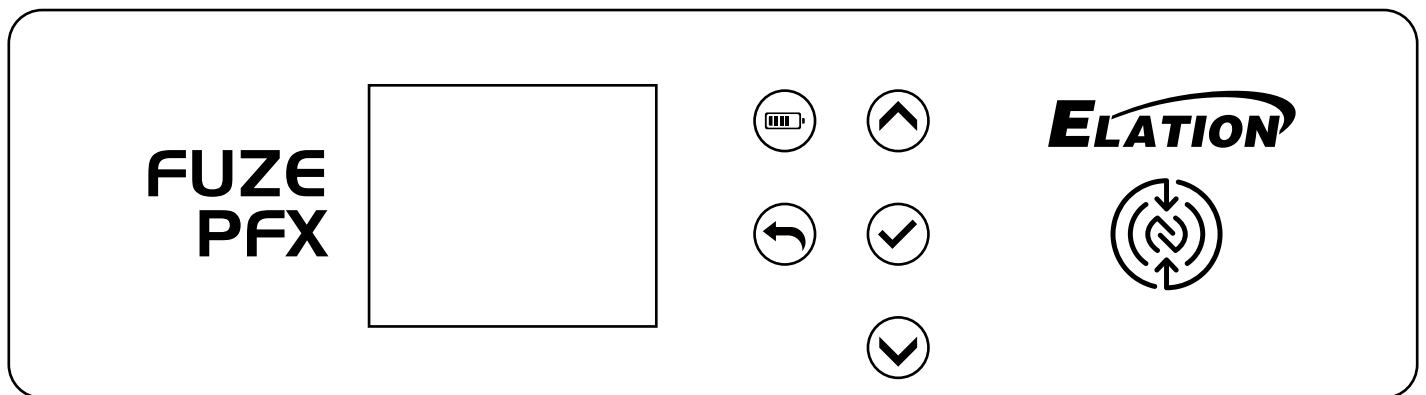

**Note:** An Elation C-Loader II can be used to update fixture software. Contact Elation Service for more information @ 323-582-3322 | [support@elationlighting.com](mailto:support@elationlighting.com)

# SYSTEM MENU


MAIN MENU	SUB MENU	OPTIONS / VALUES (Default Settings in <b>BOLD</b> )	
<b>DMX</b>	DMX Address	001 - 512	
	DMX Mode	Standard, <b>Extended</b>	
	No DMX Status	<b>Hold Last</b> , Fade to Black	
		Hibernation	Off, 1-99M ( <b>Default = 15 Min</b> )
	Protocol	Select Signal	
		Select Signal	<b>DMX</b> / Art-Net / sACN / Aria In-DMX Out / DMX In - Aria Out
		Universe	1
		DHCP	<b>Off</b> /On
		IP Address	<b>Manual : 2.x.x.x</b> Unique Static: 2.x.x.x/ 10.x.x.x/ 172.x.x.x/ 192.x.x.x
		Subnet Mask	<b>255.0.0.0</b>
Ethernet DMX Out		<b>Off</b> /On	
Aria	Aria Channel	<b>0</b> -14	
<b>Control</b>	Manual Control	Dimmer 0%- <b>100%</b> , Pan, Tilt, ...	
	Reset	All, Pan Tilt, Color, Gobo, Shutter, Others	
	Self Test	All, Dimmer, Movement, Color Mix, Gobo, Beam	
<b>Settings</b>	Fan Mode	Mute, Studio, Low, High, <b>Auto</b>	
	Movement	Pan Invert	<b>Off</b> /On
		Tilt Invert	<b>Off</b> /On
		Pan Tilt Speed	Smooth/ <b>Fast</b>
		Follow Spot	<b>Off</b> /On
		Pan Tilt Feedback	Off/ <b>On</b>
	Dimmer Curve	Linear, Square, Square Inverse, <b>S-Curve</b>	
	Dimmer Mode	Standard, Stage, TV, Architectural, Theatre, Stage2	
		Dim Speed	0s-10s
	LED Refresh Rate	900Hz - 1500Hz ( <b>1200Hz</b> ), 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz, 25KHz	
	LED Power Limit	50%, 60%, 70%, 80%, 90%, <b>100%</b>	
	Display	Screen Delay	10s-5min ( <b>Default=1 min</b> )
		Screen Lock	<b>off</b> , 10s-5minlk
Auto Rotate		Off/ <b>On</b>	
Reset Defaults	Yes/No		
<b>Information</b>	Time	Current Time, total Run Time, Last Run Time, LED Time	
	Temperature	Head, Base, LED	
	Fan	Fan xx, ...	
	DMX Values	Pan, Tilt, ...	
	Product IDs	RDM UID	
	Error Logs	Fixture Errors	
	Software Version	Vx.x	
<b>Service (Passcode 50)</b>	Calibration	Dimmer, Pan, Tilt, ...	
	Reset Last Run	Yes/No	
	Reset Error Logs	Yes/No	

## Display Shortcuts

Power On	
Up+Down (3s)	Disable Pan Tilt
Back+Enter (10s)	Countdown 10 sec
	Reset to Default (no/yes)





# DIMMER MODE

DIMMER

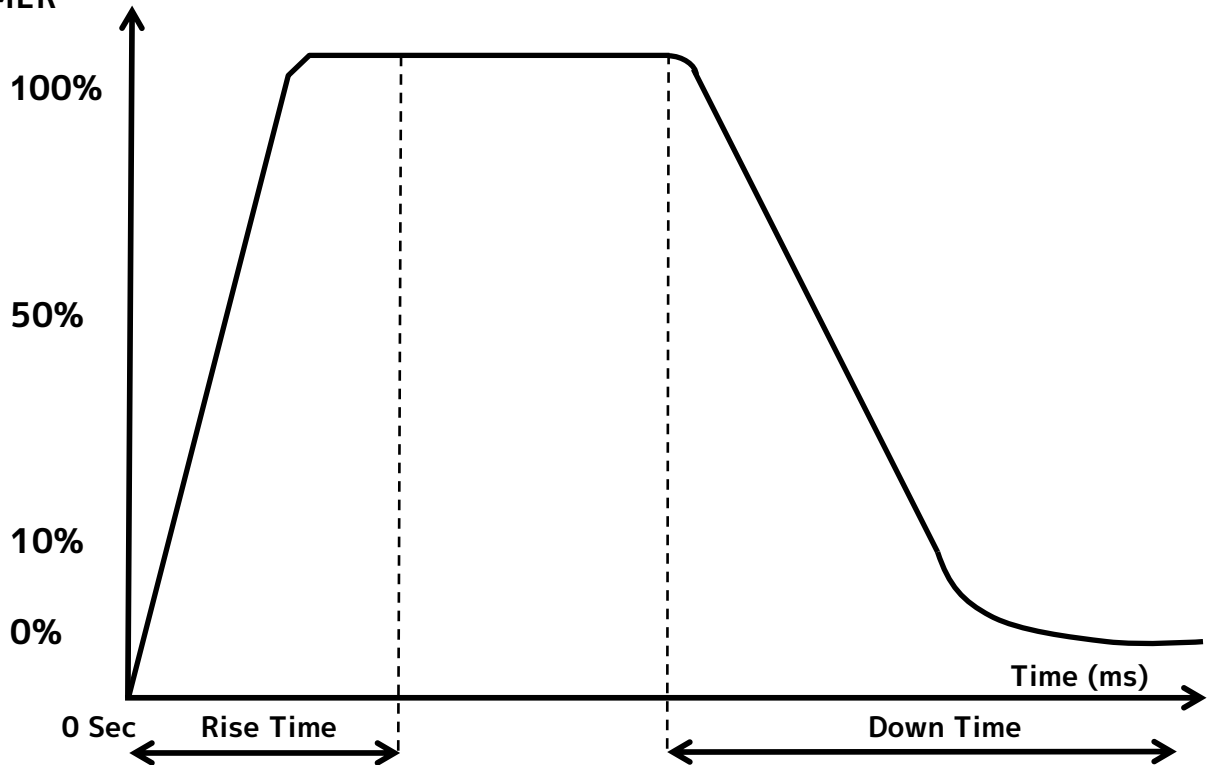

Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

## DIMMER CURVE

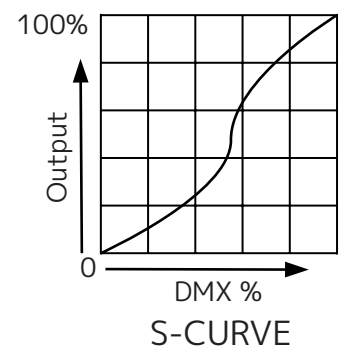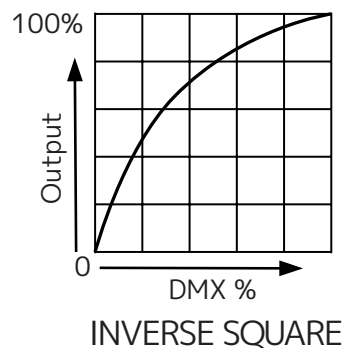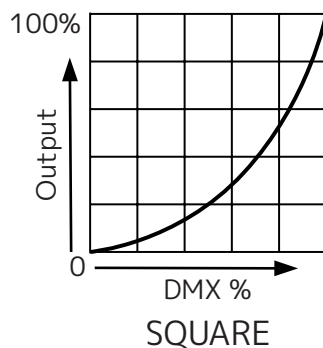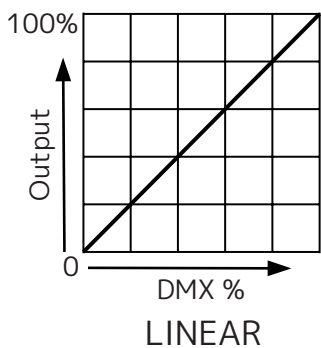

# DMX TRAITS

Features subject to change without notice						
MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT	
STANDARD	EXTENDED					
1	1	0-255	<b>Pan</b>		127	
			Left → Right			
2	2	0-255	<b>Pan Fine</b>		127	
			Fine Position			
3	3	0-255	<b>Tilt</b>		127	
			Forward → Backward			
4	4	0-255	<b>Tilt Fine</b>		127	
			Fine Position			
5	5	0-255	<b>Cyan</b>		0	
			0 → 100%			
			<b>SFX</b>			
		0-170	0 → 100%			
		171-189	100% → 0%			
		190-221	Clockwise Fast → Slow			
		222-223	Stop			
224-255	Counter-clockwise Slow → Fast					
	6	0-255	<b>Cyan Fine</b>		0	
			Fine Saturation			
6	7	0-255	<b>Magenta</b>		0	
			0 → 100%			
			<b>SFX</b>			
		0-170	0 → 100%			
		171-189	100% → 0%			
		190-221	Clockwise Fast → Slow			
		222-223	Stop			
224-255	Counter-clockwise Slow → Fast					
	8	0-255	<b>Magenta Fine</b>		0	
			Fine Saturation			
7	9	0-255	<b>Yellow</b>		0	
			0 → 100%			
			<b>SFX</b>			
		0-170	0 → 100%			
		171-189	100% → 0%			
		190-221	Clockwise Fast → Slow			
		222-223	Stop			
224-255	Counter-clockwise Slow → Fast					
	10	0-255	<b>Yellow Fine</b>		0	
			Fine Saturation			
8	11		<b>CTO</b>		0	
			Open → 2700K			
	12		<b>CTO Fine</b>		0	
			Fine Adjustment			
9	13		<b>CMY Mix Mode</b>		0	
			0-127			Full
			128-255			SFX

# DMX TRAITS

MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT
STANDARD	EXTENDED				
10	14		<b>Color</b>		0
		0	Open		
		1-11	Open/Color1		
		12-22	Color 1		
		23-33	Color 1/2		
		34-44	Color 2		
		45-55	Color 2/3		
		56-66	Color 3		
		67-77	Color 3/4		
		78-88	Color 4		
		89-99	Color 4/5		
		100-110	Color 5		
		111-121	Color 5/6		
		122-132	Color 6		
		133-143	Color 6/7		
		144-154	Color 7		
		155-165	Color 7/8		
		166-176	Color 8		
		177-188	Color 8/Open		
		189-192	Open		
	<b>Scroll</b>				
193-223	Clockwise Fast → Slow				
224	Stop				
	225-255	Counter-clockwise Slow → Fast			
11	15		<b>Rotating Gobo Wheel</b>		0
		0-9	Open		
		10-19	Rotating Gobo 1		
		20-29	Rotating Gobo 2		
		30-39	Rotating Gobo 3		
		40-49	Rotating Gobo 4		
		50-59	Rotating Gobo 5		
		60-69	Rotating Gobo 6		
		70-77	Rotating Gobo 7		
		78-93	Gobo 1 Shake Slow → Fast		
		94-109	Gobo 2 Shake Slow → Fast		
		110-125	Gobo 3 Shake Slow → Fast		
		126-141	Gobo 4 Shake Slow → Fast		
		142-157	Gobo 5 Shake Slow → Fast		
		158-173	Gobo 6 Shake Slow → Fast		
		174-189	Gobo 7 Shake Slow → Fast		
		190-221	Clockwise Fast → Slow		
		222-223	Stop		
	224-255	Counter-clockwise Slow → Fast			
12	16		<b>Rotating Gobo Index/Rotation</b>		0
		0-127	Index Position		
			<b>Rotate</b>		
		128-189	Clockwise Fast → Slow		
		190-193	Stop		
	194-255	Counter-clockwise Slow → Fast			
13	17	0-255	<b>Rotating Gobo Index/Rotation Fine</b> Fine Adjustment		0

# DMX TRAITS

MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT
STANDARD	EXTENDED				
14	18		<b>Fixed Gobo Wheel</b>		0
		0-9	Open		
		10-17	Gobo 1		
		18-25	Gobo 2		
		26-33	Gobo 3		
		34-41	Gobo 4		
		42-49	Gobo 5		
		50-57	Gobo 6		
		58-65	Gobo 7		
		66-73	Gobo 8		
		74-81	Gobo 9		
		82-89	Gobo 10		
		90-97	Gobo 11		
		98-105	Gobo 1 Shake Slow → Fast		
		106-111	Gobo 2 Shake Slow → Fast		
		112-119	Gobo 3 Shake Slow → Fast		
		120-127	Gobo 4 Shake Slow → Fast		
		128-135	Gobo 5 Shake Slow → Fast		
		136-143	Gobo 6 Shake Slow → Fast		
		144-151	Gobo 7 Shake Slow → Fast		
		152-159	Gobo 8 Shake Slow → Fast		
		160-167	Gobo 9 Shake Slow → Fast		
		168-175	Gobo 10 Shake Slow → Fast		
		176-181	Gobo 11 Shake Slow → Fast		
182-189	Idle				
	<b>Scroll</b>				
190-221	Clockwise Fast → Slow				
222-223	Stop				
224-255	Counter-clockwise Slow → Fast				
15	19		<b>Prism</b>	X	0
		0-20	Open		
		20-40	Prism 1 4-Facet Linear		
		41-60	Prism 2 4-Facet Round		
		61-80	Prism 1+2		
81-255	Idle				
16	20		<b>Prism 1 Index/Rotation</b>		64
		0-127	Index Position		
			<b>Rotate</b>		
		128-189	Clockwise Fast → Slow		
		190-193	Stop		
		194-255	Counter-clockwise Slow → Fast		
	21	0-255	<b>Prism 1 Index/Rotation Fine</b> Fine Adjustment		127
17	22		<b>Prism 2 Index/Rotation</b>		64
		0-127	Index Position		
			<b>Rotate</b>		
		128-189	Clockwise Fast → Slow		
		190-193	Stop		
		194-255	Counter-clockwise Slow → Fast		
	23	0-255	<b>Prism 2 Index/Rotation Fine</b> Fine Adjustment		127

# DMX TRAITS

MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT
STANDARD	EXTENDED				
18	24	0-255	<b>Focus</b> Infinity → Near		127
19	25	0-255	<b>Focus Fine</b> Fine Adjustment		127
20	26	0-255	<b>Zoom</b> Narrow → Wide		127
21	27	0-255	<b>Zoom Fine</b> Fine Adjustment		127
22	28		<b>Strobe</b>		50
		0-31	Closed		
		32-63	Open		
		64-95	Strobe effect slow to fast		
		96-127	Open		
		128-159	Pulse Effect		
		160-191	Open		
		192-223	Random Slow → Fast		
224-255	Open				
23	29	0-255	<b>Dimmer</b> 0 → 100%		0
24	30	0-255	<b>Dimmer Fine</b> Fine Adjustment		0
	31		<b>Dimmer Modes</b>	X	0
		0-20	Standard		
		21-40	Stage		
		41-60	TV		
		61-80	Architectural		
		81-100	Theatre		
		101-120	Stage 2		
			<b>Dimmer Time</b>		
		121	0s		
		122	0.1s		
		123	0.2s		
		124	0.3s		
		125	0.4s		
		126	0.5s		
		127	0.6s		
		128	0.7s		
		129	0.8s		
		130	0.9s		
		131	1.0s		
		132	1.5s		
		133	2.0s		
		134	3.0s		
		135	4.0s		
		136	5.0s		
		137	6.0s		
		138	7.0s		
		139	8.0s		
		140	9.0s		
141	10s				
142-255	Idle				

# DMX TRAITS

MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT
STANDARD	EXTENDED				
25	32		<b>Iris</b>		0
		0-191	Open → Closed		
		192-223	Pulse opening fast to slow		
		224-255	Pulse closing slow to fast		
	33	0 - 255	<b>Iris Fine</b> Fine Adjustment		0
26	34	0 - 255	<b>Frost (Light)</b> Open → Max		0
27	35	0 - 255	<b>Frost (Wash)</b> Open → Max		0
28	36	0-255	<b>Blade 1 A</b> Open → Closed		0
	37	0-255	<b>Blade 1 A Fine</b> Fine Adjustment		0
29	38	0-255	<b>Blade 1 B</b> Open → Closed		0
	39	0-255	<b>Blade 1 B Fine</b> Fine Adjustment		0
30	40	0-255	<b>Blade 2 A</b> Open → Closed		0
	41	0-255	<b>Blade 2 A Fine</b> Fine Adjustment		0
31	42	0-255	<b>Blade 2 B</b> Open → Closed		0
	43	0-255	<b>Blade 2 B Fine</b> Fine Adjustment		0
32	44	0-255	<b>Blade 3 A</b> Open → Closed		0
	45	0-255	<b>Blade 3 A Fine</b> Fine Adjustment		0
33	46	0-255	<b>Blade 3 B</b> Open → Closed		0
	47	0-255	<b>Blade 3 B Fine</b> Fine Adjustment		0
34	48	0-255	<b>Blade 4 A</b> Open → Closed		0
	49	0-255	<b>Blade 4 A Fine</b> Fine Adjustment		0
35	50	0-255	<b>Blade 4 B</b> Open → Closed		0
	51	0-255	<b>Blade 4 B Fine</b> Fine Adjustment		0
36	52		<b>Framing Rotation</b>		127
		0-126	Min (-60°)		
		127-128	Parallel (0°)		
		129-255	Max (+60°)		
	53	0-255	<b>Framing Rotation Fine</b> Fine Adjustment		127
37	54		<b>Pan / Tilt Speed</b>	X	0
		0-225	Max → Min Speed		
		226-235	Blackout by movement		
		236-245	Blackout by wheel changes		
		246-255	No function		



# DMX TRAITS

MODE/CHANNEL		VALUE	FUNCTION	SNAP	DEFAULT
STANDARD	EXTENDED				
38	55		<b>Control</b>		0
		0-19	Wheel Snap		
		20-39	Wheel Fade		
			<b>Fan Mode</b>		
		40-44	Mute		
		45-49	Studio		
		50-59	Low		
		60-69	High		
		70-79	Auto		
			<b>Reset</b>		
		80-84	All		
		85-87	Pan / Tilt		
		88-90	Color		
		91-93	Gobo		
		94-96	Focus and Zoom		
		97-99	Others		
		100-168	Refresh Rate (Hz) See Table on page 26		
		169-174	<b>CMY Shortest Path</b>		
		175-179	CMY Longest Path		
		180-200	Idle		
			<b>Dimmer Curves</b>		
		201-210	Linear		
		211-220	Square		
		221-230	Inverse Square		
231-240	<b>S-Curve</b>				
241-255	Idle				

# REFRESH RATE

DMX VALUE	REFRESH RATE (HZ)	DMX VALUE	REFRESH RATE (HZ)
100	900	135	1250
101	910	136	1260
102	920	137	1270
103	930	138	1280
104	940	139	1290
105	950	140	1300
106	960	141	1310
107	970	142	1320
108	980	143	1330
109	990	144	1340
110	1000	145	1350
111	1010	146	1360
112	1020	147	1370
113	1030	148	1380
114	1040	149	1390
115	1050	150	1400
116	1060	151	1410
117	1070	152	1420
118	1080	153	1430
119	1090	154	1440
120	1100	155	1450
121	1110	156	1460
122	1120	157	1470
123	1130	158	1480
124	1140	159	1490
125	1150	160	1500
126	1160	161	2500
127	1170	162	4000
128	1180	163	5000
129	1190	164	6000
130	<b>1200</b>	165	10000
131	1210	166	15000
132	1220	167	20000
133	1230	168	25000
134	1240		

# REMOTE DEVICE MANAGEMENT (RDM)

**NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.**

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, allowing the DMX systems of the device to be managed, modified, and monitored remotely (hence, remote device management). This protocol is ideal for fixtures installed in locations that are not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use it's SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

## FIXTURE RDM INFORMATION:

RDM Code	Device ID	Device Model ID	Personality ID
22A6	58 0000-FFFF	0058	Standard (1) Extended (2)

**Please be aware that not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

The following parameters are accessible in RDM on this device:

[0x0011] Proxied Device Count	[0x0601] Tilt Invert
[0x0200] Sensor Definition	[0x0602] Pan Tilt Swap
[0x0201] Sensor Value	[0x0500] Display Invert
[0x0080] Device Model Description	[0x0501] Display Level
[0x0081] Manufacturer Label	[0x0603] Realtime Clock
[0x0082] Device Label	[0x1010] Power State
[0x00E0] DMX Personality	[0x1031] Preset Playback
[0x00E1] DMX Personality Description	[0x0122] Default Slot Value
[0x0400] Device Hours	[0x00B0] Language
[0x0015] Comms Status	[0x00A0] Language Capabilities
[0x0031] Status ID Description	[0x00C2] Boot Software Version Label
[0x0032] Clear Status ID	[0x00C1] Boot Software Version ID
[0x0405] Device Power Cycles	[0x0070] Product Detail ID List
[0x0600] Pan Invert	[0x0030] Status Messages

# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## **CLEANING**

Frequent cleaning is recommended to insure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface at least every 20 days with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.

## **MAINTENANCE**

Regular inspections are recommended to insure proper function and extended life.

There are no user serviceable parts inside this fixture, please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electric check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened. Loose screws may fall out during normal operation resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.

**NEVER** remove the ground prong from the power cable.

# ERROR CODES

Error Codes subject to change without notice	
ERROR CODES	DESCRIPTION
Pan	Movement is not located in the default position after the reset. These messages will appear after a fixture reset if the magnetic-indexing circuit malfunctions (sensor failed, or magnet is missing) or there is a motor failure (defective motor or a defective motor IC drive on the main PCB). This error may also be displayed if the head/yoke was blocked during a reset function.
Tilt	
CyanWheel	Movement is not located in the default position after the reset. These messages will appear after a fixture reset if the magnetic-indexing circuit malfunctions (sensor failed, or magnet is missing) or there is a motor failure (defective motor or a defective motor IC drive on the main PCB).
MagentaWheel	
YellowWheel	
CTOWheel	
ColorWheel	
RotGoboWheel	
GoboRot	
FixGoboWheel	
Prism1	
Prism1Rot	
Prism2	
Prism2Rot	
Zoom	
Focus	
Blade	
LED Temp	These messages will appear if there is a temperature and/or fan malfunction.
Base Temp	
LED Fan1	
LED Fan2	
LED Fan3	
LED Fan4	
LED Fan5	
LED Fan6	
Head Fan1	
Head Fan2	
Gobo Fan	
Blade Fan	
Base Fan	

# SPECIFICATIONS

## SOURCE

400W 6,600K Bright White LED Engine  
20,000 Hour Average LED Life\*

\*Test lab conditions. May vary depending on several factors including but not limited to:

Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control, and Dimming.

## PHOTOMETRIC DATA

15000 Total Lumen Output  
CRI 72 (Filter CRI 80, CRI 90)  
Zoom Range 3° - 53°

## EFFECTS

Motorized Zoom  
4 Rotating Full Blackout Framing Blades  
+/- 60° Framing Index  
2 Variable Frost Filters (Light and Wash)  
Dual Independent Prisms (6 Facet linear & 6 Facet round)  
Motorized Iris  
Variable 16-bit Dimming Curves  
High Speed Electronic Shutter and Strobe  
Pan Angle: 540°  
Tilt Angle: 270°

## COLOR

CMY Color Mixing  
Linear CTO Color Correction  
7 Dichroic Colors including UV Filter  
High CRI Filter 80+90

## GOBOS

7 Rotating / Indexing Interchangeable Glass Gobos  
11 Static Metal Gobos

## CONTROL / CONNECTIONS

DMX Channels  
16-bit Pan, Tilt, and Dimming Control  
DMX Adjustable LED Frequency  
DMX, RDM, E-FLY Wireless, Art-Net, sACN Protocol Support  
4 Button Touch Control Panel  
Full Color 180° Reversible LCD Menu Display  
Locking 5pin XLR Connector In/Out  
Locking RJ45 Ethernet Connector In/Out  
IP65 Locking Power Connector In/Out  
USB Connection (Firmware Updates)

## SIZE / WEIGHT

Length: 14.3" (362mm)  
Width: 9.2" (233mm)  
Vertical Height: 25.14" (637mm)  
Weight: 50 lbs. (22.7kg)

## ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz  
600W Max Power Consumption  
14°F to 113°F (-10°C to 45°C)




## APPROVALS / RATINGS

CE | cETLus | FCC | UKCA | IP20



# DIMENSIONS

\*Drawings not to scale. Specifications and improvements in the design of this unit and this manual are subject to change without notice.

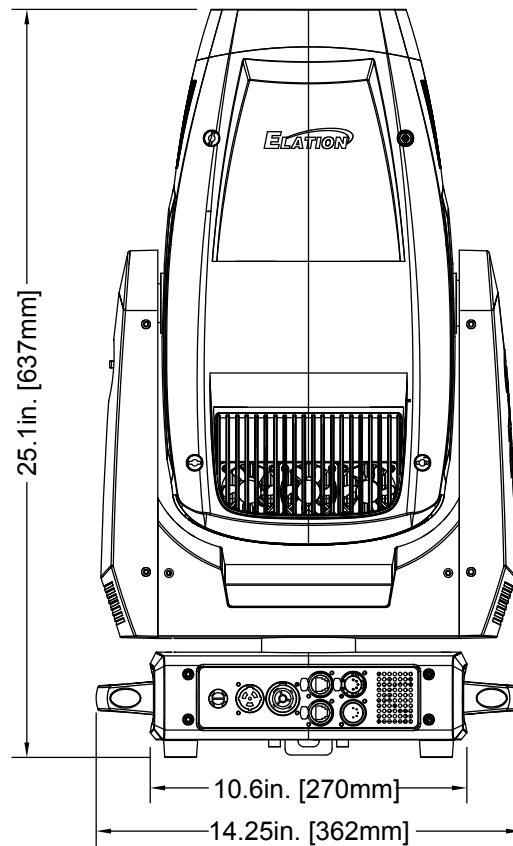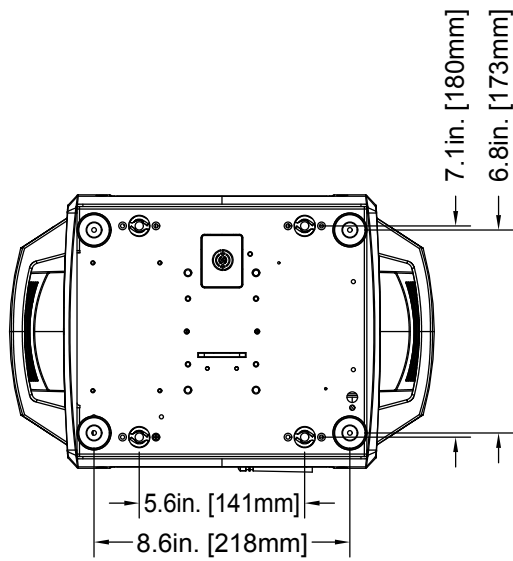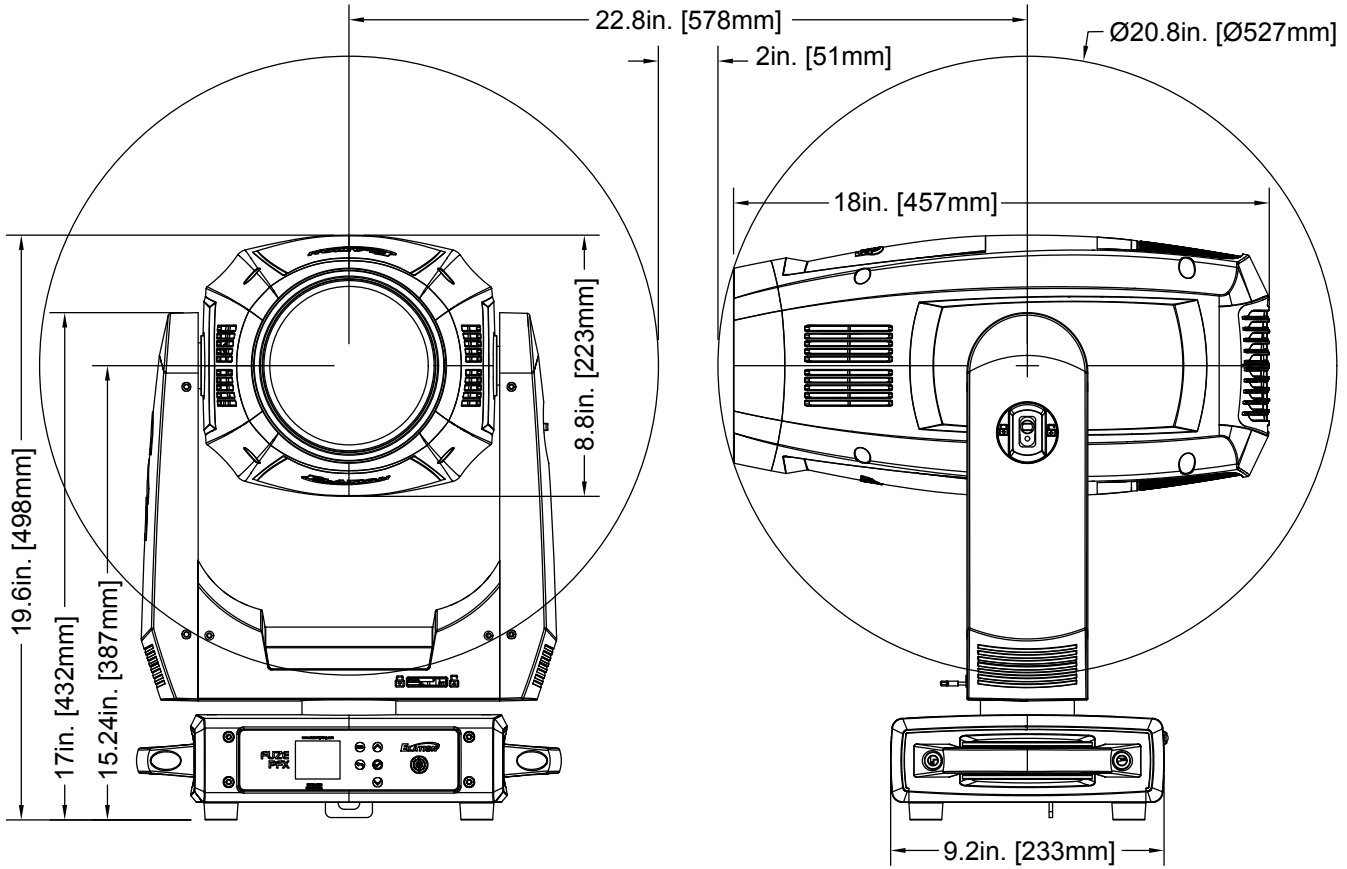

## OPTIONAL ACCESSORIES

ORDER CODE	ITEM
TRIGGER CLAMP	Heavy Duty Wrap Around Hook Style Clamp
SIP126	5 ft. (1.5m) IP65 Twist Lock Power Link Cable
TOU027	5 ft. (1.5m) 5pin PRO DMX Cable
	Additional Cable Lengths Available



## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



